




## FIRMWARE GUIDE

You can update or change the firmware on the handset.

Please download the latest firmwares from

[https://lonelyfilms.com/semote\\_firmware.zip](https://lonelyfilms.com/semote_firmware.zip)

- » Copy the new firmwares to the Firmware folder on the SD card.
- » Power down the handset.
- » Press the upper left, the lower right blue keys and the knob at the same time.
- » Use the knob to scroll up and down in the file folder, select the file you want to use and press the knob for update.
- » Power cycle the handset to apply changes.

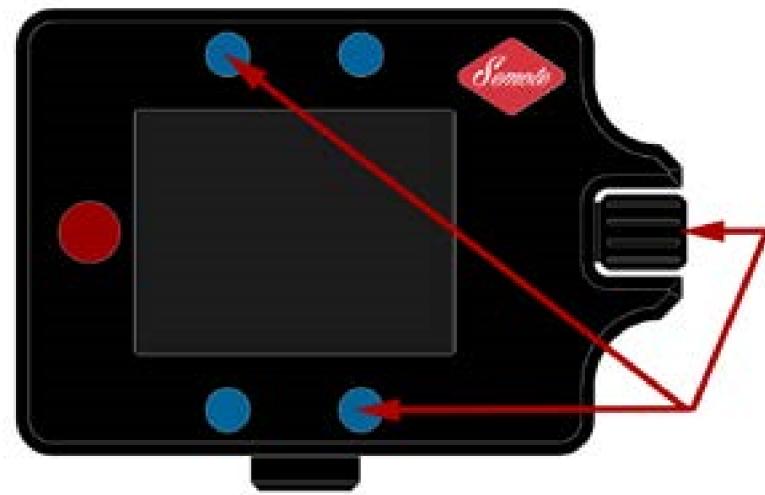

**Latest firmwares are**

35MM\_3.05 (Arriflex 416/235/435/535)  
A35\_1.03 (Alexa 35)  
A65\_2.02 (Alexa 65)  
ALEXA\_5.03 (Alexa EV/PLUS/XT)  
KOMODO\_1.04 (RED DSMC3)  
MINI\_3.04 (Amira, Alexa Mini, Mini LF)  
PHNTM\_2.04 (Phantom high speed)  
RED\_2.02 (RED DSMC2)

SXT\_2.03 (Alexa SXT, Alexa LF)  
VENICE\_2.09 (Sony Venice 1&2)