




FIRMWARE GUIDE

You can update or change the firmware on the handset.

Please download the latest firmwares from

https://lonelyfilms.com/semote_firmware.zip

- » Copy the new firmwares to the Firmware folder on the SD card.
- » Power down the handset.
- » Press the upper left, the lower right blue keys and the knob at the same time.
- » Use the knob to scroll up and down in the file folder, select the file you want to use and press the knob for update.
- » Power cycle the handset to apply changes.

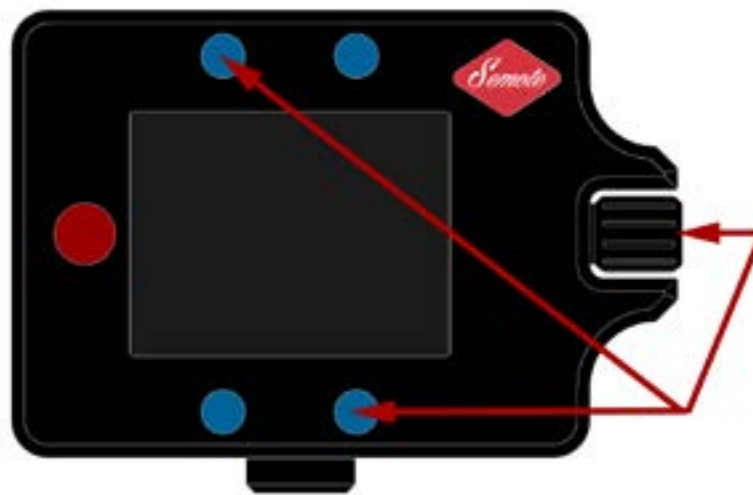

Latest firmwares are

35MM_3.02 (Arriflex 416/235/435/535)

A35_1.02 (Alexa 35)

A65_2.02 (Alexa 65)

ALEXA_5.03 (Alexa EV/PLUS/XT)

KOMODO_1.03 (RED DSMC3)

MINI_3.04 (Amira, Alexa Mini, Mini LF)

PHNTM_2.04 (Phantom high speed)

RED_2.02 (RED DSMC2)

SXT_2.03 (Alexa SXT, Alexa LF)

VENICE_2.08 (Sony Venice 1&2)